

CRL Elevator - Safe Transport of Asphyxiating Gases - Key Instructions

Group Member #1 at Basement

- 1) Call the elevator
- 2) Enter the empty elevator.
- 3) Place Independent Service Key into middle slot located above the floor buttons & turn into ON position.
- 4) Press floor destination (where another group member should be waiting).
- 5) Load Gas Tank onto elevator.
- 6) Exit Elevator.
- 7) Place Door Shut/Lock key into key slot above call button & turn to shut door.

Group Member #2 at Destination floor.

- 1) Elevator doors will open.
- 2) Unload Gas Tank from elevator.
- 3) Enter empty elevator.
- 4) Turn Independent Service Key to OFF position & remove from slot.
- 5) Exit elevator.
- 6) Elevator returns to normal service